



TOP

TAPE TEMPLATE TO DOOR
USE PUNCH TO MARK HOLES
USE 1/8" PILOT DRILL
DRILL TO 3/8" ALL 4 HOLES

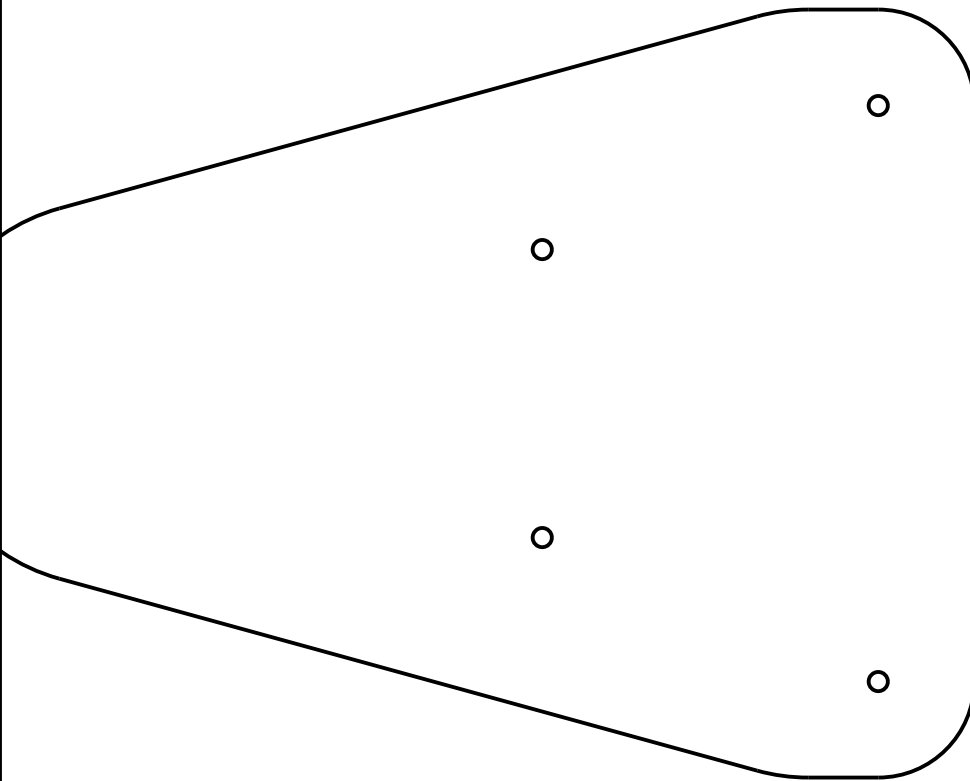

MEASURE 10" UP FROM FLOOR TO THIS LINE


FOLD AT
LINES



1.75"
THICK
DOOR

TOP

TAPE TEMPLATE TO DOOR
USE PUNCH TO MARK HOLES
USE 1/8" PILOT DRILL
DRILL TO 3/8" ALL 4 HOLES

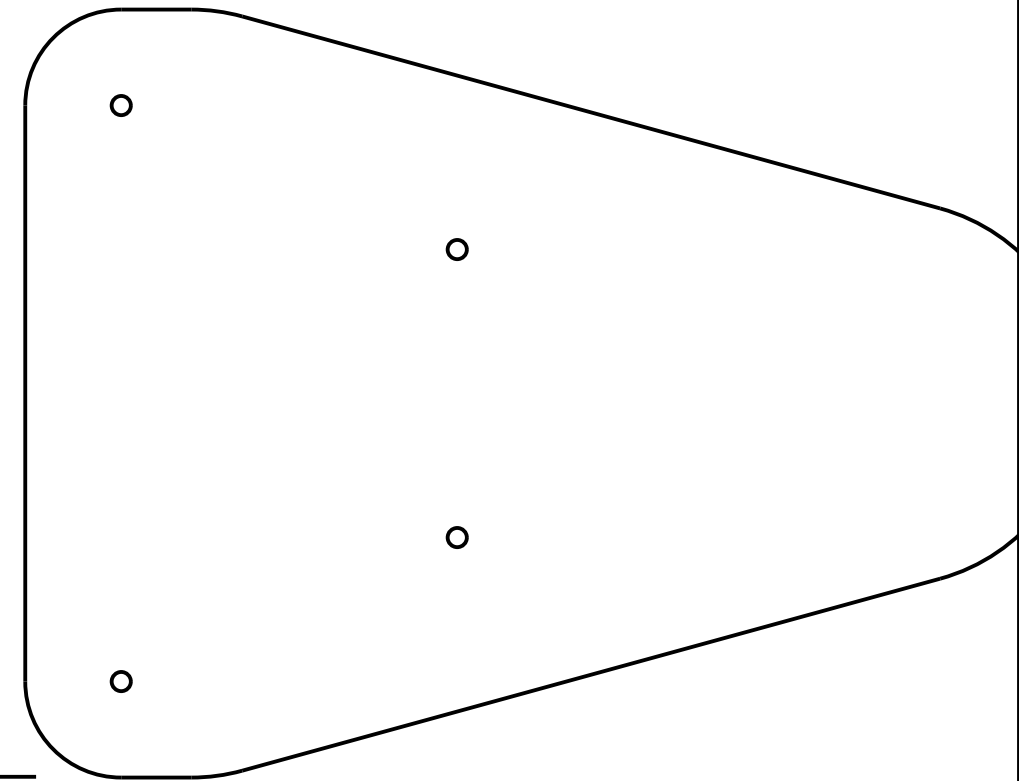

MEASURE 10" UP FROM FLOOR TO THIS LINE